

PS-900 Series Option Boards




Installation Instructions

A DANGER A


To avoid risk of electric shock, turn off AC power to power supply before installing or wiring option board


This sheet covers:

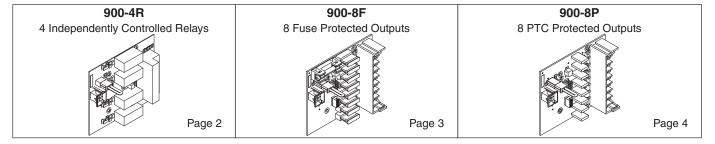

Refer to installation instructions for compatible supply models - PS902, PS904, PS906, and PS914.

1 INSTALL OPTION BOARD(S) INTO POWER SUPPLY

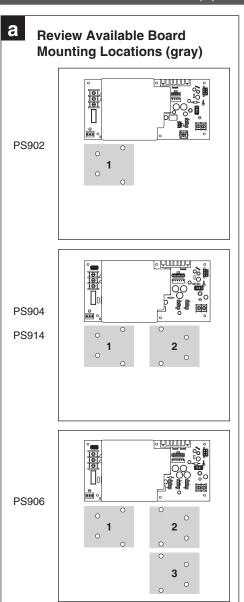

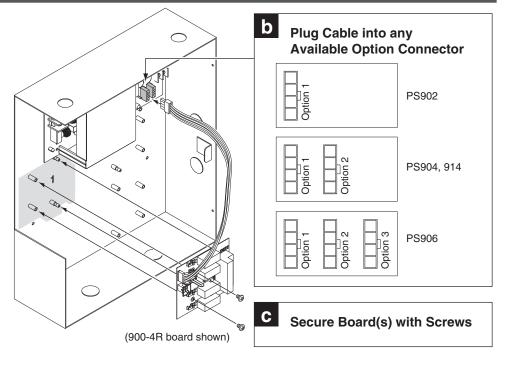

Customer Service

1-877-671-7011

www.allegion.com

900-4R


900-4R Specifications

Inputs I1-I4	Dry contacts required (Closed = Active)		
	Connect control contacts between SC (Signal Common) and any input		
Outputs 01-04	• Form C contacts rated 30VDC, 3A (dry) • 12/24VDC, 3A (wet) when AC powered • 9.6-13.2VDC or 19.2-26.4VDC when battery powered • Maximum load cannot exceed power supply ratings or 6A for outputs combined		
Board Input Power	Board requires 0.18A max. of power supply output current to operate		
Temperature Range	32°-120° F (0°- 49° C)		
Compliance	UL 294, ULC-S318, RoHS, & FCC Part 15		
Fire Alarm Input	Accepts 900-FA Fire Alarm Board (Optional)		

Function: Four independent dry-contact inputs control four Form C outputs


Powered Outputs


(Default)

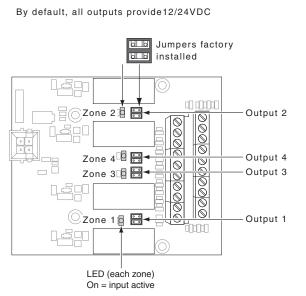

Dry Contact Outputs (Optional)

For dry contact outputs, remove appropriate jumpers and rotate 90°, then reinstall (Zone 1 - Zone 4)

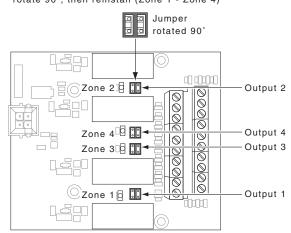

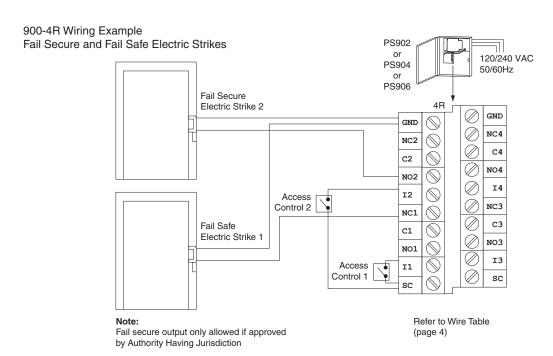


900-8F

900-8F Specifications

Each Output	• Rated for supply maximum • 12/24VDC when AC powered • 9.6-13.2VDC or 19.2-26.4VDC when battery powered • Maximum load cannot exceed power supply ratings or 6A for outputs combined		
Board Input Power	Board requires 0.045A max. of power supply output current to operate		
Temperature Range	32°-120° F (0°- 49° C)		
Compliance	UL 294, ULC-S318, RoHS, & FCC Part 15		
Fire Alarm Input	Accepts 900-FA Fire Alarm Board (Optional)		
F1 - F8	32V, 7.5A, ATO blade style	ACAUTION:	
F9 Main Fuse	300V, 15A, 3AG style	For protection against risk of fire, replace fuse with same type and rating	

Function: Provides 8 independently-fused outputs.

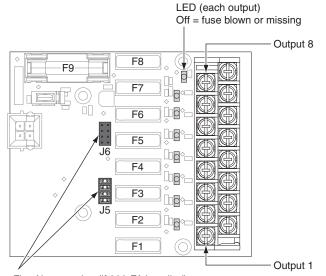

- Fire Alarm setting (if 900-FA installed)

 Jumper on J5: Active fire alarm turns off all outputs
- Jumper on J6: Active fire alarm turns off outputs 1-4 only

Refer to Wire Table (page 4)

Note:

Fail secure output only allowed if approved by Authority Having Jurisdiction

		Ð	GND
08		₽)	GND
07		₩ ₽)	GND
06	(4)	$\stackrel{\sim}{=}$	
05		<u>D</u>	GND
0.4		Ð)	GND
04	HH(-	争)	GND
03		₩ ₩	GND
02		$\stackrel{\circ}{=}$	
01		<u>Đ)</u>	GND


Terminals

900-8P

900-8P Specifications

Each Output	• 1.4A maximum • 12/24VDC when AC powered • 9.6-13.2VDC or 19.2-26.4VDC when battery powered		
	Maximum load cannot exceed power supply ratings or 6A for outputs combined		
Board Input Power	Board requires 0.045A max. of power supply output current to operate		
Temperature Range	32°-120° F (0°- 49° C)		
Compliance	UL 294, ULC-S318, RoHS, & FCC Part 15		
Fire Alarm Input	Accepts 900-FA Fire Alarm Board (Optional)		

Function: Provides 8 independent outputs, each protected by an automatically-resettable thermal fuse.

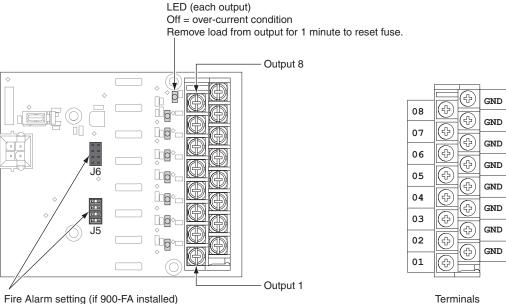

- Fire Alarm setting (if 900-FA installed)
- Jumper on J5: Active fire alarm turns off all outputs
- Jumper on J6: Active fire alarm turns off outputs 1-4 only

Note:

Fail secure output only allowed if approved by Authority Having Jurisdiction

Wire Table: (Suggested maximum)

Wire Ga	Device Current	Output*	Input
(AWG)	(Amps DC)	(max. ft)	(max. ft)
14	0.3	850	
	0.5	500	
18	0.3	340	1200
	0.5	200	

*Wiring allows for 10% voltage drop at device current at 12 or 24VDC

Max. ft = one way distance between power supply and device.

NOTE: WHEN INSTALLATION IS COMPLETE, SECURE **ENCLOSURE DOOR WITH SCREWS OR KEYLOCK.**



© Allegion 2014 44487106 Rev. 01/14-b