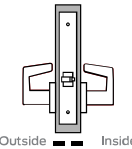
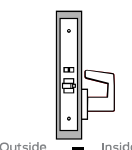

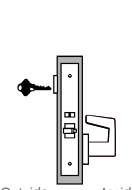

 



 
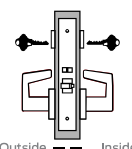

 
 

 
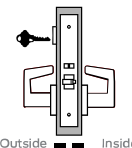

 


 
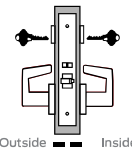

 


 
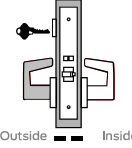

 
 

 


Function	Function Description	Transformation Instructions	Conventional Cylinder			FSIC/SFIC	Additional Part(s)
			Cylinder Length (Conventional Only)	Modular cylinder	SL cylinder		
L9010 Passage Latch ANSI F01 	<ul style="list-style-type: none"> Latchbolt retracted by lever from either side at all times Inside lever always free for immediate egress 	Do not install thumbturn assembly on inside or cylinder outside. Install lock chassis in the unlocked position. If product has rose (sectional) trim, no additional parts required. If escutcheon trim is used, both inside and outside trim will need to be replaced.	No cylinder required				N/A
L9025 Exit Or Communicating Lock ANSI F31 	<ul style="list-style-type: none"> Latchbolt retracted by lever from inside only Inside lever always free for immediate egress 	Do not install thumbturn assembly on inside. Install chassis in the locked position. Install inside lever with L285-150 mounting plate. Do not install outside lever or cylinder. If lock is on a wood door, additional prep is required. Refer to L lock door template #L904. Designed for sectional (rose) trim only.	No cylinder required				L283-150 ¹ 
L9026 Exit Lock with Cylinder 	<ul style="list-style-type: none"> Latchbolt retracted by lever (or knob) from inside at all times Key outside retracts latchbolt. Inside lever always free for immediate egress 	Do not install thumbturn assembly on inside. Install the lock chassis in the locked position. Replace the clover leaf cylinder cam with appropriate straight cylinder cam from the table. Install on the outside. Install inside lever with mounting plate L285-150. Do not install outside lever. If lock is on a wood door, additional prep is required, refer to template #L904. Designed for sectional (rose) trim only.	118, 138, 158	L583-476 	L583-802 	K510-680 	L283-150 ¹ 
			114, 112, 134	L583-477 	L583-803 		
L9060 Apartment Entrance Lock ANSI F09 	<ul style="list-style-type: none"> Latchbolt retracted by lever from either side Outside lever is made inoperative by key inside Key outside retracts latchbolt but cannot lock or unlock outside lever Rotating inside lever retracts latchbolt; key inside retracts latchbolt and unlocks outside lever Inside lever always free for immediate egress Note: Outside lever remains inoperative until unlocked by key inside.	Do not install thumbturn assembly on inside. Install cylinder with clover leaf cam on inside . Replace the clover leaf cylinder cam on the outside with appropriate straight cylinder cam from table. If product has rose (sectional) trim, no additional parts required. If escutcheon trim is used, inside escutcheon will need to be replaced.	118, 138, 158	L583-476 	L583-802 	K510-680 	N/A
			114, 112, 134	L583-477 	L583-803 		
L9070 Classroom, Exterior Lockdown Only ANSI F05 	<ul style="list-style-type: none"> Latchbolt retracted by lever from either side Outside lever is made inoperative by key outside Key outside unlocks outside lever and retracts latchbolt Inside lever always free for immediate egress Note: Outside lever remains inoperative until unlocked by key.	Install cylinder with clover leaf cam on outside. Do not install thumbturn assembly on inside. If product has rose (sectional) trim, no additional parts required. If escutcheon trim is used, inside escutcheon will need to be replaced.	118, 138, 158	L583-474 	L583-800 	L583-255 	N/A
			114, 112, 134	L583-475 	L583-801 		
L9071 Classroom Security Lock, Interior/Exterior Lockdown ANSI F32 	<ul style="list-style-type: none"> Latchbolt retracted by lever from either side Outside lever is made inoperative by key from either side Rotating inside lever retracts latchbolt; key on either side unlocks outside lever and retracts latchbolt Inside lever always free for immediate egress Note: Outside lever remains inoperative until unlocked by key.	Do not install thumbturn assembly on inside. Install clover leaf cam cylinder on inside and outside. If product has rose (sectional) trim, no additional parts required. If escutcheon trim is used, inside escutcheon will need to be replaced.	118, 138, 158	L583-474 	L583-800 	L583-255 	N/A
			114, 112, 134	L583-475 	L583-801 		
L9080 Storeroom Lock ANSI F07 	<ul style="list-style-type: none"> Outside lever always fixed; latchbolt retracted by inside lever Key outside retracts latchbolt Inside lever always free for immediate egress 	Do not install thumbturn assembly on inside. Install lock chassis in the locked position. Replace the clover leaf cylinder cam with appropriate straight cylinder cam from table. If product has rose (sectional) trim, no additional parts required. If escutcheon trim is used, inside escutcheon will need to be replaced.	118, 138, 158	L583-476 	L583-802 	K510-680 	N/A
			114, 112, 134	L583-477 	L583-803 		

Note: Instructions for base model L9050. Assumes Schlage cylinders and L9050 as base function (L283-133 chassis/L9050LB distributor lock case; levers inside and outside, cylinder outside, thumbturn inside).

1. L283-150 is designed for Rose trim only.