
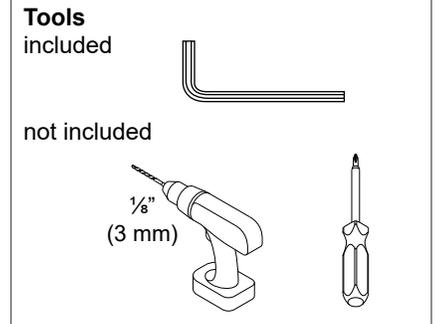



## PT Dummy function

## Installation Instructions

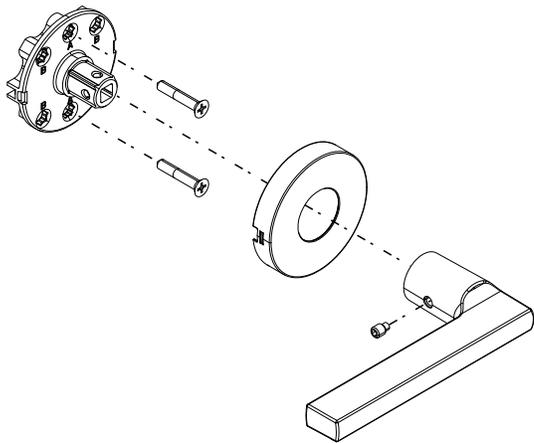


### 1 Prepare the door.

- 1a Mark the door with a vertical line at desired backset.
- 1b Mark the door for two screws as shown. Mark holes for both top A and bottom A of the spindle shown by the arrows.
- 1c Drill pilot holes for two screws. PT172 will need to be a thru hole.

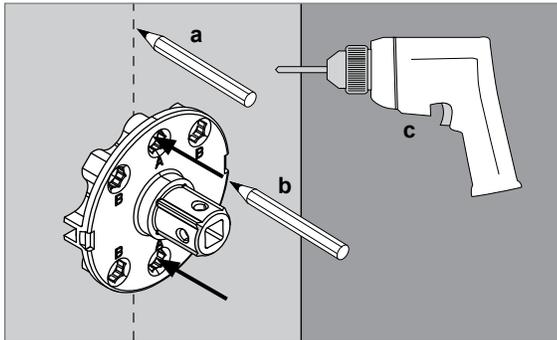


### 2 Install spindle

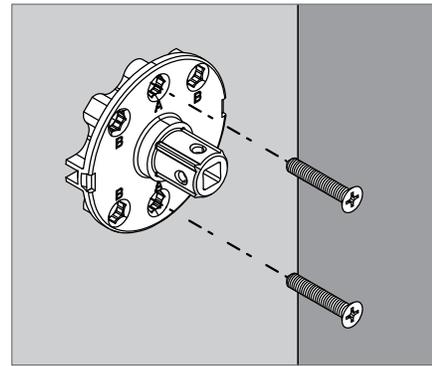


### 3 Install Rose

Ensure that rose removal cutout is placed beneath the lever and facing away from the door edge.

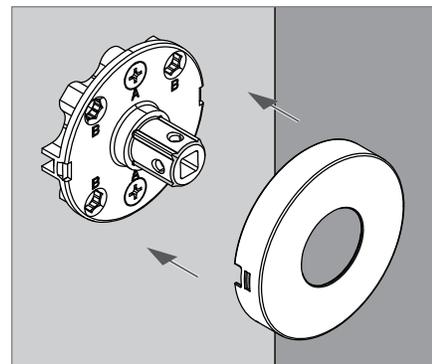


#### 4 Install Lever

Loosen the setscrew in lever using the hex wrench. Ensure proper engagement of spindle and lever.

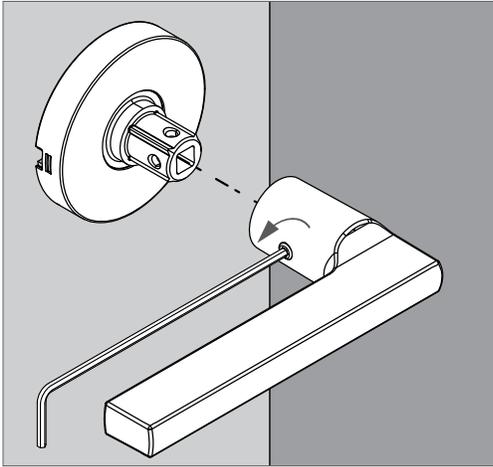


#### 5 Install Setscrew

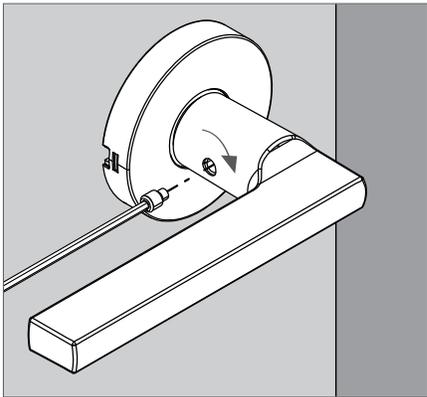

#### Double dummy application

For double dummy application, install the second lever with the spindle as shown below. Repeat steps 2 through 5.

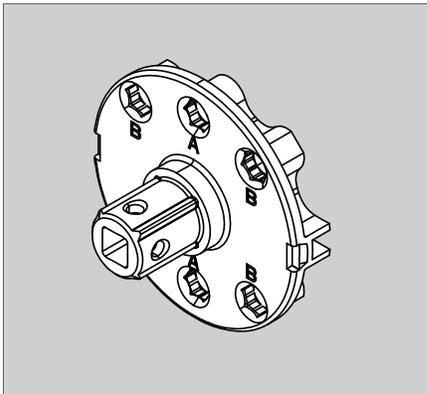

Customer Service

1-877-671-7011

[www.allegion.com/us](http://www.allegion.com/us)